








Package Contents

- Speakerphone x 1
- USB 2.0 Type-A to USB Type-C Cable x 1
- Quick Start Guide x 1

Basic Operations


No.	Description	Operation
1	Power On 	<p>a. Connect to USB source device: The speakerphone will be powered on automatically. Power LED lights white, Battery/Charge LED blinks red like breathing (charging mode, when fully charged, it lights green).</p> <p>b. Hold the Power button for about 1~2s: All LEDs blink white once like breathing, after the device is powered on, the Power LED lights white, other LEDs are off or Battery/Charge LED blinks red like breathing/lights green (when USB device is also connected).</p>
2	Power Off 	<p>Hold the Power button for about 1~2s. All LEDs will blink (white) once like breathing and then off, the device is powered off (if the speakerphone is connected to the USB device, it still in charging mode). Note: When both USB and Bluetooth sources are disconnected, and the buttons are not operated, after 5mins, the speakerphone will be powered off automatically.</p>
3	Mute/Unmute 	<p>After the speakerphone is powered on, press Mute button, the speakerphone enters Mute/Unmute mode:</p> <p>a. Mute: All LEDs light red, and the Mics are invalid.</p> <p>b. Unmute: All LEDs are back to last status, and the Mics are enabled.</p>
4	Bluetooth Connection 	<p>Press the Bluetooth button to switch the on/off status of Bluetooth function, and the LED changes accordingly.</p> <p>a. Bluetooth on: The LED of Bluetooth will light blue. The speakerphone enters the pairing mode that can be found and connected.</p> <p>b. Bluetooth off: The current Bluetooth connection</p>

No.	Description	Operation
		between the source and the speakerphone is broken, and the speakerphone can't be found by the Bluetooth enabled device. The LED of Bluetooth will be off.
5	Battery/Charge Display 	<p>a. Charging mode: Connect to the USB device using the provided USB cable, the speakerphone enters charging mode. With USB device connected, when the speakerphone is powered off, it is still in charging mode. Battery/Charging LED blinks red like breathing during charging. When fully charged, the LED lights green.</p> <p>b. Show the battery level: Press Battery/Charge button, the LEDs will show battery level clockwise, and the last LED will blink. After about 2s, all LEDs will be back to the last status. The quantity of lit LEDs shows the battery level.</p> <p>c. Low power: If connect the speakerphone to the source via Bluetooth only, the LED of Battery/Charge will blink (red) fast when the battery level is less than 10%.</p>
6	Answer Call  /End Call 	<p>a. Calling status: The LEDs of Answer Call and End Call will blink blue when the source device makes a call or the source device receives the call.</p> <p>b. Answer calling: When the calling is connected, the LEDs of Answer Call and End Call will be off.</p> <p>Note: This function is only available in Bluetooth mode.</p>
7	Showing Talker direction	The LEDs will show the direction when the Mics receives the sound.

Connection

The speakerphone supports two methods to connect to source devices (such as PC, MacBook, mobile phone): USB and Bluetooth.

- **USB:** Connect the USB Type-C port of the device to the PC using the provided USB cable. Select the Speakerphone as the default audio device in Windows Control Panel Sound Settings.
- **Bluetooth:** After the device is powered on, press the Bluetooth button to set Bluetooth function to on. Using the source device (such as Mobile phone) to find the name of the speakerphone to connect.

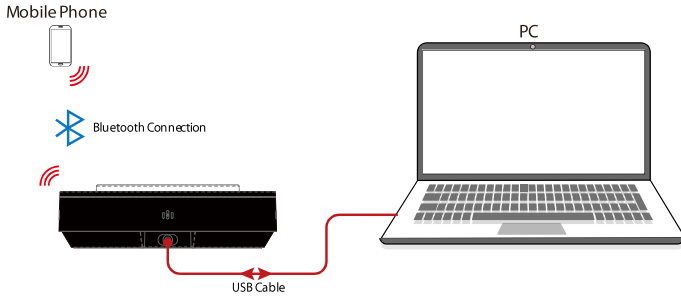

Note:

- The two methods can be connected at the same time.
- After the speakerphone is connected to a computer via the USB cable, its speaker and mic can be detected by the system and specific application in the name of the following:
Speaker Name: AVA AnyCo A5
MIC Name: AVA AnyCo A5
- When the speakerphone is waiting for pairing with the computer or mobile phone through Bluetooth, the name can be found in the Bluetooth list is:
Bluetooth: AVA AnyCo A5










Scan QR code with your smart-phone
for complete user manual.

内容物

- スピーカーフォン x1
- USB 2.0 TypeA- USB TypeC ケーブル x1
- クイックスタートガイド x1

基本操作

No.	Description	Operation
1	電源オン 	<p>a. USB デバイスへ接続: スピーカーフォンは自動で電源がオンになります。電源の LED が白色に点灯し、バッテリー/充電 LED が呼吸するように赤色に点滅します (充電モードで完全に充電されると、緑色に点灯します)。</p> <p>b. 電源ボタンを約 1~2 秒間長押しすると: すべての LED が呼吸するように 1 回白く点滅し、デバイスの電源を入れた後は、電源の LED が白く点灯し、他の LED は消えます。またはバッテリー/充電 LED が呼吸するように赤く点滅/緑に点灯します (USB デバイスが接続されている場合)。</p>
2	電源オフ 	<p>電源ボタンを約 1~2 秒間長押しすると。すべての LED は呼吸するように 1 回 (白く) 点滅し、その後消えます (スピーカーフォンが USB デバイスに接続されている場合は、充電モードのままです)。注: USB と Bluetooth の両方が切断され、ボタンが操作されない場合、5 分後にスピーカーフォンの電源が自動的にオフになります。</p>
3	ミュート/ ミュート解除 	<p>スピーカーフォンの電源がオンになってからミュートボタンを押すと、スピーカーフォンはミュート/ミュート解除モードになります。</p> <p>a. ミュート: 全ての LED が赤色に点灯します。マイクが使用不可になります。</p> <p>b. ミュート解除: 全ての LED が元のステータスに戻ります。マイクが有効になります。</p>
4	Bluetooth 機能の オン/オフ 	<p>Bluetooth ボタンをおして Bluetooth 機能のオン/オフを切り替えると、それに伴い LED も変化します。</p> <p>a. Bluetooth オン: スピーカーフォンは Bluetooth デバイスから検出可能なペアリングモードに入ります。Bluetooth の LED が青色に点灯します。</p> <p>b. Bluetooth オフ: 接続機器とスピーカーフォンとの現在の Bluetooth 接続が解除され、Bluetooth が有効になっているデバイスからス</p>


No.	Description	Operation
		<p>スピーカーフォンが検出されなくなります。Bluetooth の LED が消灯します。</p> <p>注意： Bluetooth 接続が無いか接続が非アクティブ (USB も切断されている) の時は、5 分後、スピーカーフォンは自動的に電源オフになります。</p>
5	バッテリー/充電表示 	<p>a. 充電モード： 付属の USB ケーブルを使って USB デバイスに接続すると、スピーカーフォンは充電モードになります。USB デバイスが接続されている状態で、スピーカーフォンの電源がオフになっても、充電モードのままです。充電中は、バッテリー/充電 LED が呼吸するように赤く点滅します。完全に充電されると、LED は緑色に点灯します。</p> <p>b. バッテリー残量の確認： バッテリー/充電ボタンを押すと、LED がバッテリー残量を時計回りに表示し、最後の LED は点滅します。約 2 秒後、全ての LED は元のステータス表示に戻ります。点灯している LED の数がバッテリー残量を表しています。</p> <p>c. 残量が少ない時： バッテリー/充電表示の LED が 10% 未満になると、赤色に素早く点滅します。</p>
6	受話  / 終話 	<p>a. 通話ステータス： 接続デバイスが電話を発信あるいは受信すると、受話と終話の LED が青色に点滅します。</p> <p>b. 電話に出る： 通話に接続すると、受話と終話の LED が消灯します。</p> <p>注意： この機能は Bluetooth モードでのみ利用可能です。</p>
7	トーカーの指示を示します	マイクが音声を受信すると、LED がその指示を示します。

接続

スピーカーフォンは次の 2 種類の方法で機器 (PC, MacBook, スマートフォンなど) に接続することができます：USB, Bluetooth

- USB：** デバイスの USB TypeC ポートから付属の USB ケーブルで PC に接続してください。Windows のコントロールパネル内のサウンド設定で、スピーカーフォンをデフォルトのオーディオデバイスとして選択してください。
- Bluetooth：** デバイスの電源をオンにしてから、Bluetooth ボタンを押し

て Bluetooth 機能をオンにしてください。デバイスがペアリング状態になります。接続機器（スマートフォンなど）を使用してスピーカーフォンの名前を探し接続してください。

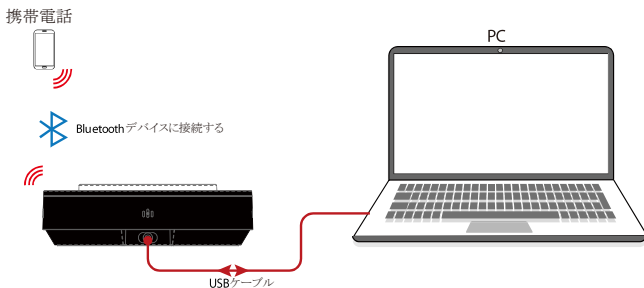

注意：

- これら 2 つの方法により、同時に接続することができます。
- コンピューターに USB ケーブル経由でスピーカーフォンを接続すると、スピーカーとマイクはシステムや特定のアプリケーション上では以下の名前で検出されます：

スピーカー名： AVA AnyCo A5

マイク名： AVA AnyCo A5

- スピーカーフォンが Bluetooth 経由でのコンピューターやスマートフォンのペアリングを待機している間、Bluetooth リスト上では以下の名前で検出されます：

Bluetooth： AVA AnyCo A5



完全なユーザーマニュアルを見るには、
スマートフォンで QR コードをスキャンしてください